


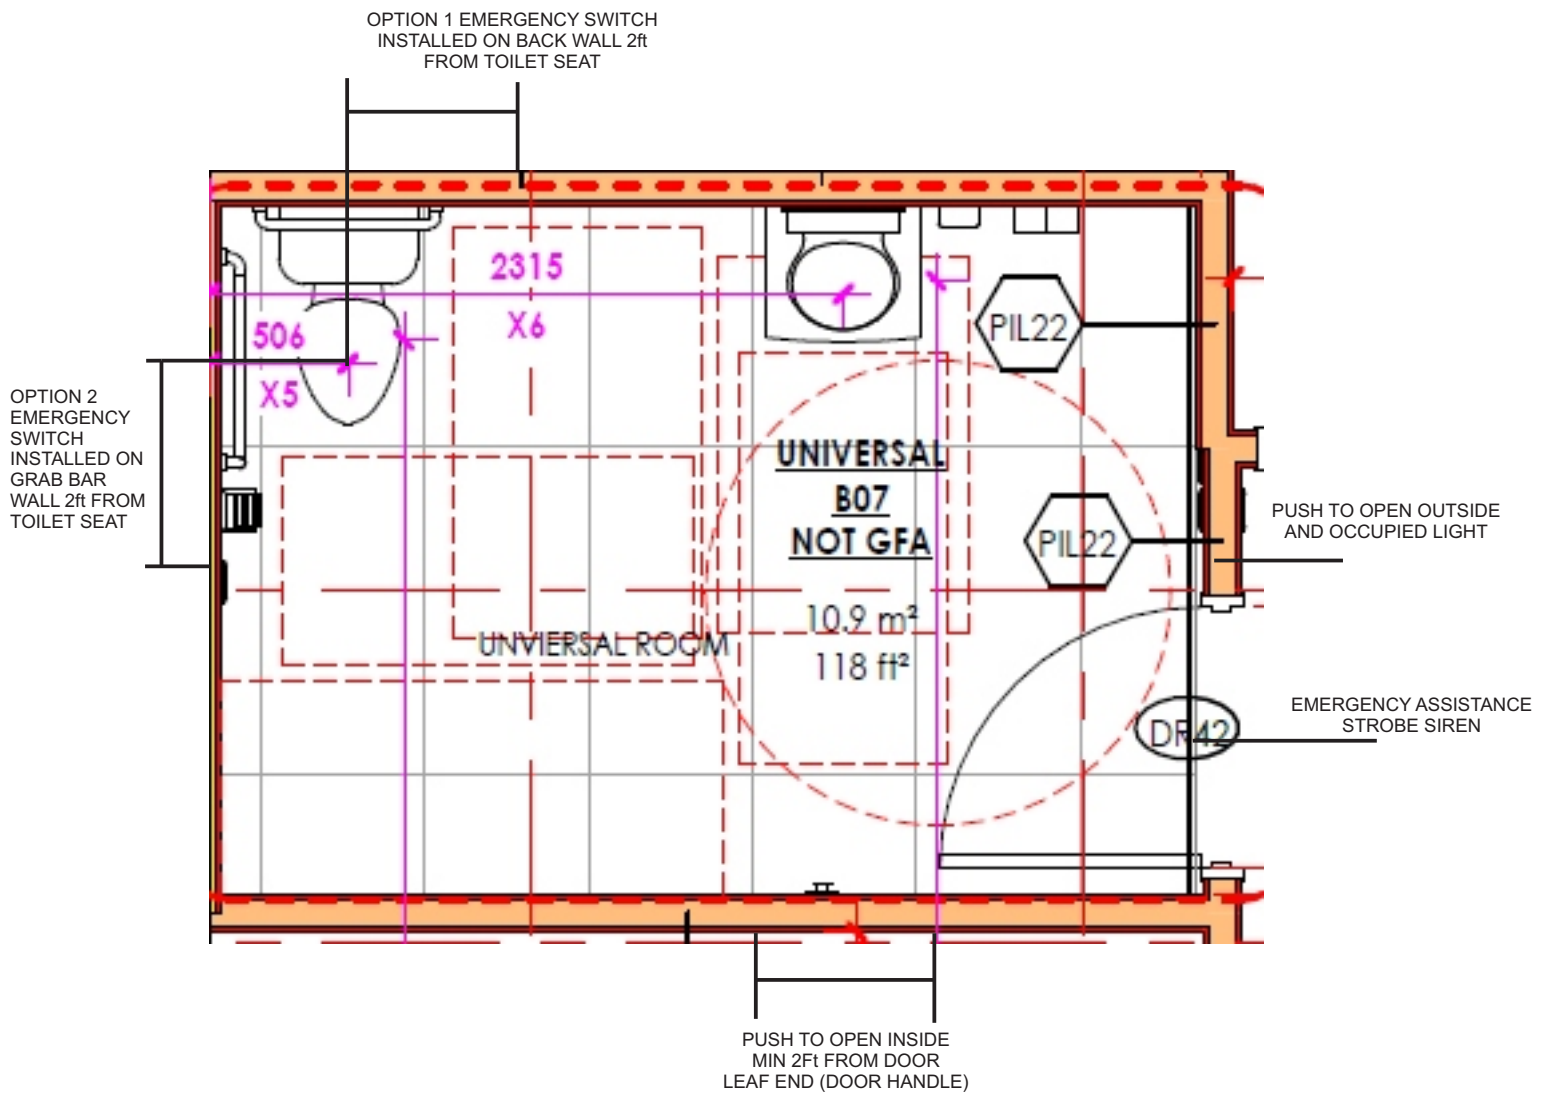

1. ALL DEVICES TO BE INSTALLED AT 3ft (36") HEIGHT FROM FLOOR
2. PUSH TO OPEN INSIDE MUST BE 2ft (24") MIN FROM DOOR LEAF END AND MAX 5ft (60")
3. PUSH TO LOCK CAN BE INSTALLED CLOSER. (NO MIN DISTANCE REQUIRED)
(Ideally install 4" to the left or right of the PUSH TO OPEN switch.)
4. PUSH TO OPEN OUTSIDE CAN BE ANY DISTANCE FROM DOOR LATCH BUT NOT MORE THAN 5ft (60")
5. OCCUPIED WHEN LIT ANNUNCIATOR SHOULD BE INSTALLED NEAR PUSH TO OPEN OUTSIDE SWITCH. (Ideally installed 4" above the PUSH TO OPEN OUTSIDE switch or to the left/right)
5. EMERGENCY STROBE SIREN TO BE INSTALLED OUTSIDE ABOVE THE CENTRE OF THE DOOR FRAME.
6. PRESS FOR EMERGENCY ASSISTANCE TO BE INSTALLED WITHIN 2ft (24") OF THE TOILET SEAT MAY BE INSTALLED ON BACKSIDE WALL OR SAME WALL AS GRAB BAR. ENSURE THE SWITCH DOES NOT INTERFERE WITH GRAB BAR. EMERGENCY INFORMATION STICKER TO BE INSTALLED DIRECTLY ABOVE EMERGENCY SWITCH.